



You're safe with....

EVERSAFE



Fire Safety @ Home

Small fires in the home

can occur at any time due to a faulty electrical appliance or on the cook-top in the kitchen. Prevent these small fires from getting bigger by having quality firefighting equipment nearby. Fire Safety Equipment should not be installed too close to the risk but also not too far away – usually about two metres is ideal.

For the cook-top, an **EVERSAFE** 1.0 metre x 1.0 metre Fire Blanket is the ideal solution for cooking oils. Make sure you read

the instructions on the front of the packaging and rehearse how to use it correctly. Also available in 1.2 x 1.8 metre for larger risk applications.

An **EVERSAFE** 1.0kg Dry Powder extinguisher is suitable and effective to use on most fires, timber, paper, cardboard, flammable liquids and also those where live electrical current is present.



For fires where it might be difficult to direct the discharge to the source of the flame with a nozzle, or for the car, caravan or boat, an **EVERSAFE** 1.0kg with a hose is the best option. Fire extinguishers should be fully inspected every six months. Check that the pressure indicator is in the 'GREEN' zone regularly but **NEVER** test by discharging the extinguisher.



Smoke Detectors:

Every home should have at least one smoke detector installed – ideally outside of the bedrooms – and should be tested on a regular basis and the battery replaced every 12 months.

Call us to discuss the best type of Smoke Detector for your home.